


# **Item No.: Freedom Standing Desk** Installation guide

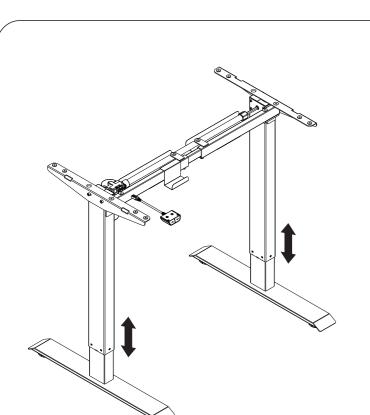

#### Technical data

Column Number	2
Maximum Load	70KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	710mm
Highest Position	1210mm
Desktop Size	1000-1600mm 500-800mm
Duty Cycle	10%(Pause 18 minutes for each continuous 2-minute operation)
Applicable Temperature	0~40°C


The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of standby mode of electrical and electronic household equipment.


The technical information of standby mode:

Mode	Power consumption (Watts)	The period (Minutes)
Standby	≤0.5W	1min

Power	Supply
Manufacturer:Shenzhen RBD 1	Technology Corporation
Model:W49RA628-290018	Average Active Efficiency: ≥88.0%
Rated Input:100-240VAC, 50/60Hz,1.5A	Efficiency at Low Load (10%):84.44%
Rated Output:29.0VDC, 1.8A,52.2W	No-load Power Consumption:≤0.21 W

# Part list

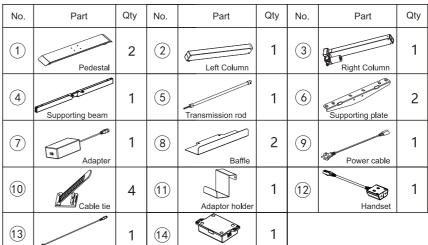

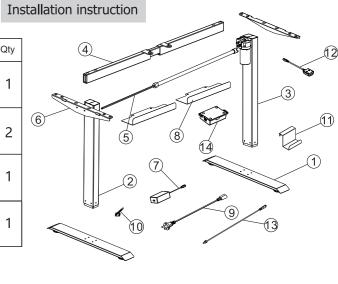


### STEP1

Install Pedestal(1)





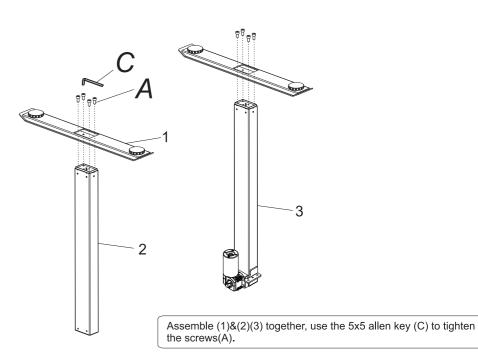

# Accessory list

Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.














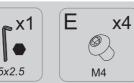








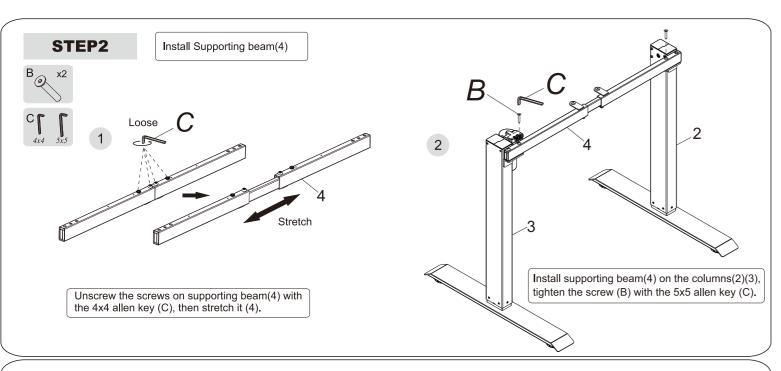


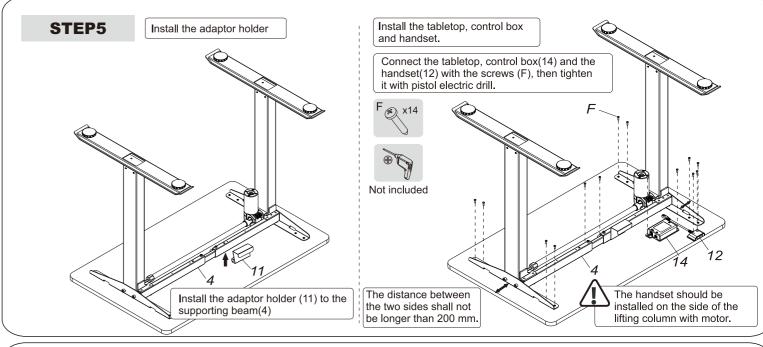


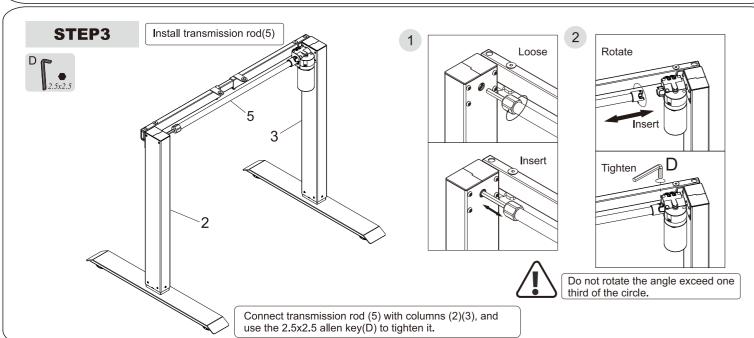

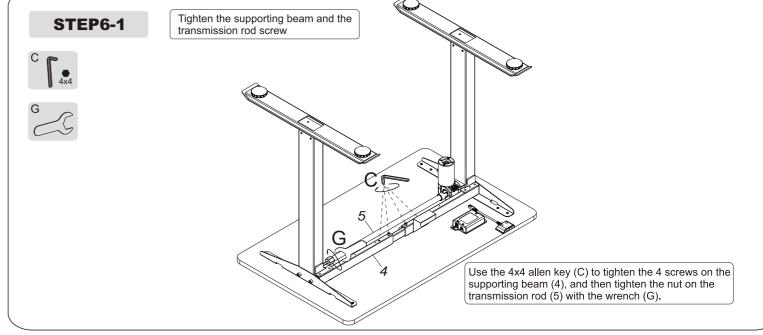

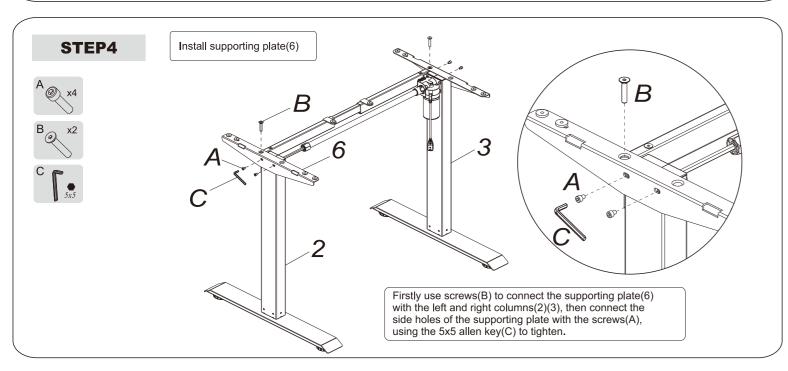

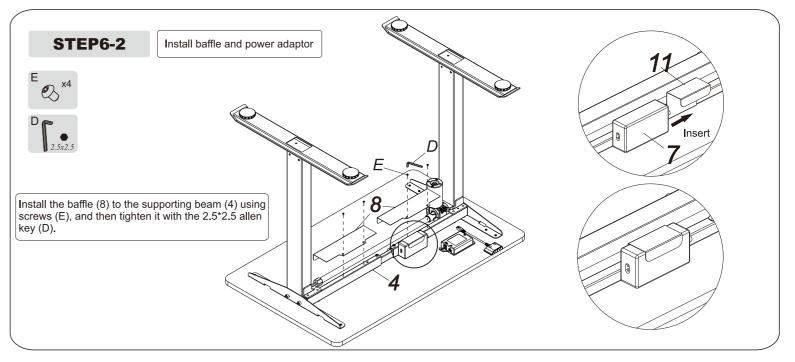

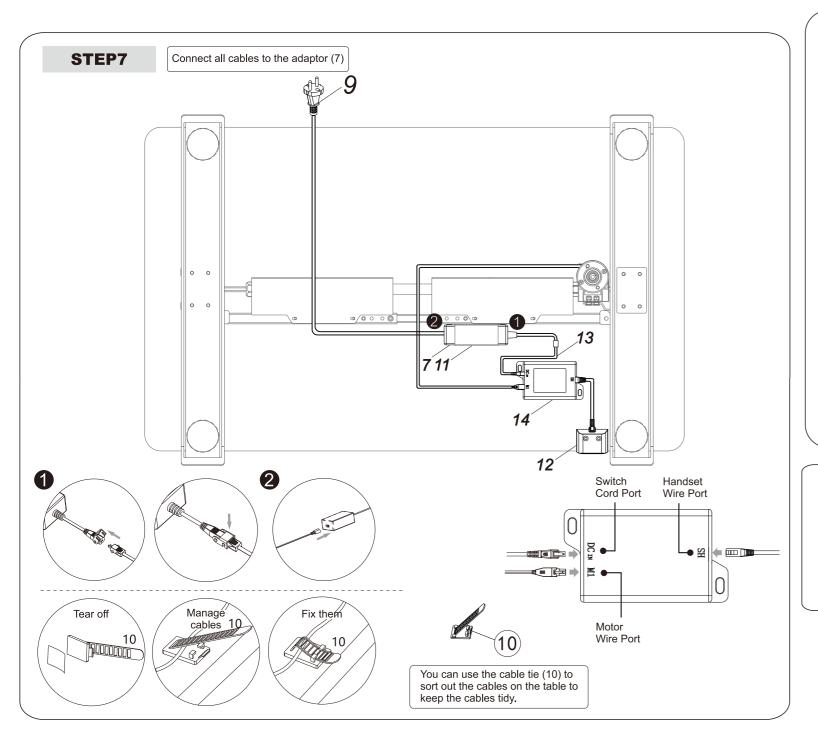

#### Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

No response while long pressing down arrow after connected with a power supply  No response while pressing up arrow/down arrow after connected with a power supply  No response while pressing up arrow/down arrow after connected with a power supply  1. Check if all the cables be connected well arrow/down arrow after connected with a power supply  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Reset  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Reset after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Reset  2. Contact your supplier or dealer;  2. Contact your supplier or dealer;	Fault phenomenon	Method
a power supply  2.Contact your supplier or dealer  No response while pressing up arrow/ down arrow after connected with a power supply  Rising in a low speed  The motor not move as instructed  Codown but not go up  Downward sliding  Frequently Reset  Overwork (Duty cycle: Max 2min on/18min OFF)  Not enough up&down height  1.Check if all the cables be connected well are cables be connected well are connected well are cables be connected well are cables a	No response while long pressing	1.Check if all the cables be connected well
arrow/ down arrow after connected with a power supply  Rising in a low speed  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Contact your supplier or dealer  1. Reset 2. Contact your supplier or dealer  1. Reset 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Reset  1. Reset  1. Reset  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer		2.Contact your supplier or dealer
connected with a power supply  2.Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Reset  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Reset  1. Reset	No response while pressing up	1.Check if all the cables be connected well
Rising in a low speed  2. Contact your supplier or dealer  1. Contact your supplier or dealer  1. Reset  2. Contact your supplier or dealer  1. Reset  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Reset  1. Reset		2.Contact your supplier or dealer
The motor not move as instructed  1. Contact your supplier or dealer  1. Reset 2. Contact your supplier or dealer  1. Reset 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;  1. Reset  1. Reset	5	1. Check if overloaded, max loading: 70kg;
Go down but not go up  1.Reset 2.Contact your supplier or dealer 1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer 1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer 1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer 1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer; 1. Reset 1. Reset	Rising in a low speed	2. Contact your supplier or dealer
Go down but not go up  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg; 2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;  Not enough up&down height  1. Reset	The motor not move as instructed	Contact your supplier or dealer
2.Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Reset  1. Reset	Go down but not go up	1.Reset
Downward sliding  2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Reset  1. Reset	Go down but not go up	2.Contact your supplier or dealer
2. Contact your supplier or dealer  1. Check if overloaded, max loading: 70kg;  2. Contact your supplier or dealer  1. Restart after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Restart after suspend for 18mins while connecting with power;  2. Contact your supplier or dealer;  1. Reset	Downward sliding	1. Check if overloaded, max loading: 70kg;
Contact your supplier or dealer  Overwork  (Duty cycle: Max 2min on/18min OFF)  Not enough up&down height  2. Contact your supplier or dealer;  2. Contact your supplier or dealer;  1. Reset	Downward sliding	2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)  Not enough up&down height  2. Contact your supplier or dealer 1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;  1.Reset	Fraguently Poset	1. Check if overloaded, max loading: 70kg;
OVerwork (Duty cycle: Max 2min on/18min OFF)  Connecting with power;  2. Contact your supplier or dealer;  Not enough up&down height  1.Reset	r requently reset	2. Contact your supplier or dealer
2. Contact your supplier or dealer;  Not enough up&down height  1.Reset	0.0	
Not enough up&down height	(Duty Gyde. Wax 211111 011/1011111 OFF)	2. Contact your supplier or dealer;
	Not enough up&down height	1.Reset
	g passan asign	2.Contact your supplier or dealer



- 1. Power supply: AC100V-240V,50/60Hz
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- 5. Check carefully to ensure correct and complete assembly before using.
- 6. Be familiar with all functions and program settings of the product before first use.
- 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
- 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
- 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- 13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
  14. Keep the original package of the equipment if necessary in case of the future use in transportation.

#### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

